
· 6 CYLINDER STANDARD OR POWER STEERING -170 & 200 CUBIC INCH

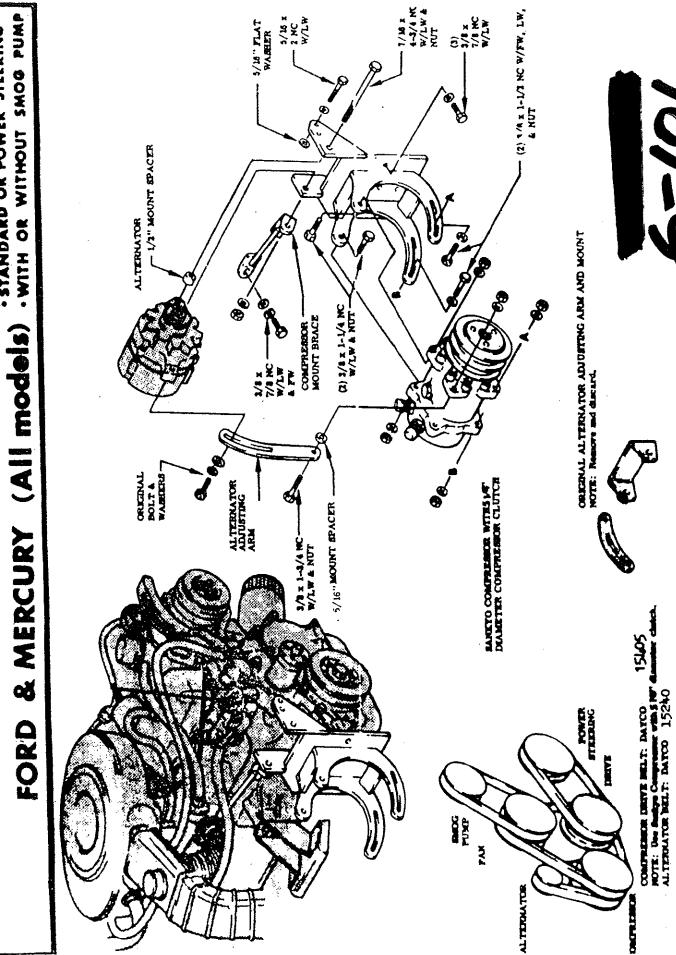

PACKING LIST 7015

1	7015-1 Compressor Mount	2	3/8" x 1 1/4" NC Bolts
1	7015-2 Mount Brace	2	3/8" x 1 1/2" NC Bolts
1	7015-3 Alternator Adjusting Arm	ì	7/16" x 4 3/4" NC Bolt
1	1/2" Mount Spacer	5	3/8" NC Nut
1	5/16" Mount Spacer	1	7/16" NC Nut
1	15240 Alternator Belt	1	5/16" Lockwasher
1	15405 Drive Belt	9	3/8" Lockwashers
1	5/16" x 2" NC Bolt	1	7/16" Lockwasher
1.	3/8" x 7/8" NC Bolt	3	3/8" Flatwasher
1	3/8" x 1 3/4" NC Bolt	1	5/16" Flatwasher

INSTALLATION INSTRUCTIONS

- 1. Disconnect battery ground cable. Drain and remove radiator.
- 2. Remove all belts and discard the alternator belt.
- 3. Remove alternator and lay aside. Remove and discard original alternator mount and adjusting arm.
- 4. Using the mount and schematic as a guide, remove bolts from engine. Holding the mount in approximate position will help identify the proper bolts to be removed.
- 5. Loosely install (7015) compressor mount to engine, using bolts and lockwashers as shown on schematic. Note: 5/16" flatwasher required behind front vertical of mount.
- 6. Loosely install (7015-2) mount brace to engine, using (1) 3/8" x 7/8" NC bolt with Lockwasher and flatwasher.
- 7. Install compressor with clutch to mount, uisng (2) 3/8" x 1 1/4" NC bolts with lockwashers, flatwashers and nuts. Use (2) 3/8" x 1 1/2" NC bolts with lockwashers, flatwashers and nuts in slotted adjusting ears of mount. DO NOT tighten at this time.
- 8. Install alternator above compressor, using (1) 1/2" spacer in front of the alternator for proper alignment with clutch. Use (1) 7/16" x 4 3/4" NC bolt through mount, alternator trunnion and mount brace. Secure with 7/16" lock-washer and nut.
- 9. Install (7015-3) alternator adjusting arm to compressor ear, uisng 5/16" mount spacer and (1) 3/8" x 1 1/2" NC bolt with lockwasher and nut. Attach slotted end of adjusting arm to alternator with original hardware.
- 10. Uniformly tighten all bolts except those pertaining to belt tension.
- 11. Install belts as shown in belt wrap diagram, adjust to proper tension & tighten.
- 12. Replace radiator and add coolant. Re-connect battery ground cable.
- CAUTION: BEFORE RELEASING VEHICLE TO CUSTOMER-Check all Radiator Hoses, Heater Hoses and Oil Lines to be sure there is proper clearance of Compressor, Compressor Mount and Compressor Clutch.