

Part# 6-132

- 1. Remove fan shroud.
- **2.** Drain radiator.
- **3.** Remove upper radiator hose.
- 4. Remove lower hose from radiator.
- **5.** Remove radiator.
- **6.** Loosen and Remove power steering belt, if equipped.
- 7. Remove fan and fan belt pulley.
- 8. Remove generator and generator bracket. Do not remove upper generator bracket to water pump brace.
- **9.** Remove heater return hose from water pump to the 45-degree fitting.
- 10. Adjust water pump heater fitting to engine timing cover. See picture #6.
- **11.** Install A/C compressor bracket to engine timing cover. **See picture #1, remove bolts marked "A"**. Use new bolts supplied. Do not tighten bolts completely.
- 12. Install lower A/C bracket on top of existing old generator bracket brace to lower right water pump bolt position using new bolt supplied. See pictures #1, 2 and 3, bolt marked "B".
- 13. Install upper front compressor brace to water pump at upper right water pump position using new bot supplied. See pictures #5 and 6.

- **14.** Tighten all braces and bracket attaching bolts evenly.
- 15. Install generator. Do not tighten completely. If changing to alternator in place pf the generator, refer to the last age of these instructions. (GM INTERNAL ALTERNATOR INSTALLATION ON T-BIRD)
- 16. Install compressor with service fittings parallel to the oil filter pipe. The mounting tabs on the compressor need to be reamed to 7/16". See picture #7.
- 17. Loosen front upper compressor brace at water pump and install compressor to brace bolt, supplied. Tighten both brace bolts evenly.
- 18. Install rear upper compressor brace to rear of compressor flange. See picture #6.
- 19. Thru rear upper compressor brace, drill cover using 3/8" drill to mark center of hole. Drill a 1" deep hole using a 5/16" drill bit. Tap with 3/8"-16NC and install bolt and lock washer, supplied. Tighten upper rear compressor brace evenly. **See picture#6.**
- 20. Install fan/generator (alternator) A/C belt loosely. Gates #9470 or #9476, or similar belt.
- 21. Slide fan pulley into position. '57 pulley suggested due to 55-56 pulley design.
- **22.** Install and tighten fan and fan spacer.
- **23.** Tighten belt and secure generator.
- **24.** Reinstall power steering belt is so equipped.
- **25.** Reinstall heater return hose.

NOTE: Compressor is supplied with correct amount of oil. No additional oil charge is required. Compressor label denotes correct refrigerant to use in system.

LH=DRIVER SIDE RH=PASSENGER SIDE









