

Installation Manual


1969-1970 Mustang Factory Air

DOCUMENT #1-2027FA BENCH CALIBRATION


©2018 ClassicAutoAir / 12.18



DO NOT USE CALIBRATION KEY WITHOUT TECH SUPPORT

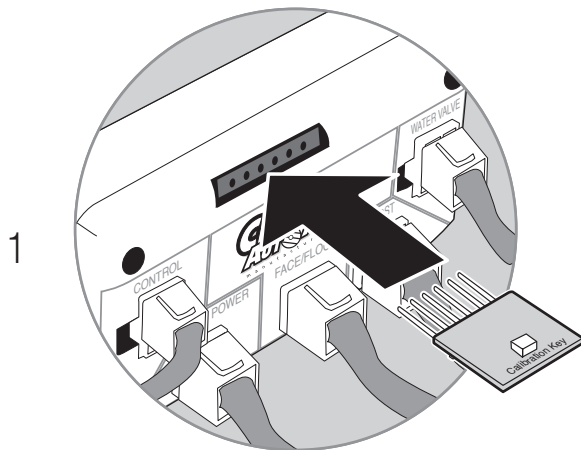


Insert Calibration Key as shown (LED side up) into 6-pin connection in ECU

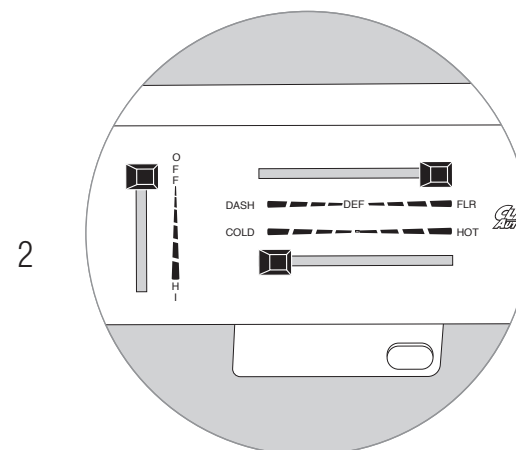


Start by positioning the knobs as shown:

Fan: Off
Mode: Floor
Temp: Cold

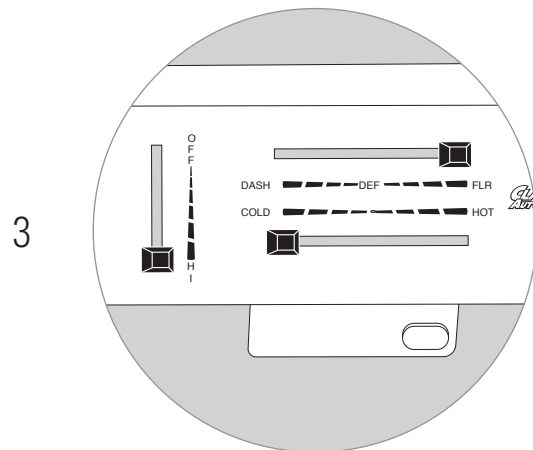


Move Fan Knob to High...

YOU WILL SEE...

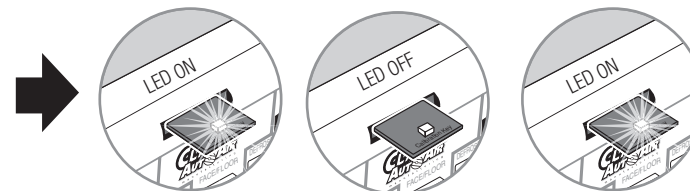


4

Move MODE knob to DASH
in one motion

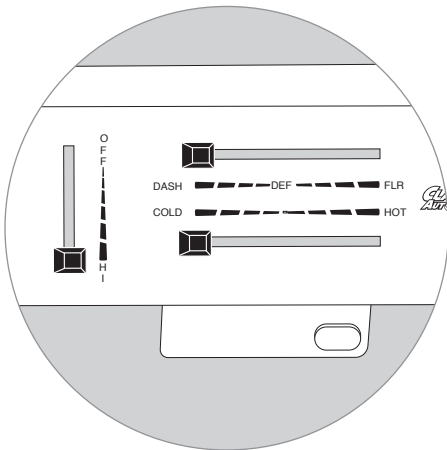


AFTER YOU MOVE THE KNOB YOU WILL SEE...

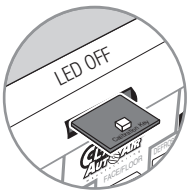


5


Move TEMP knob to HOT
in one motion

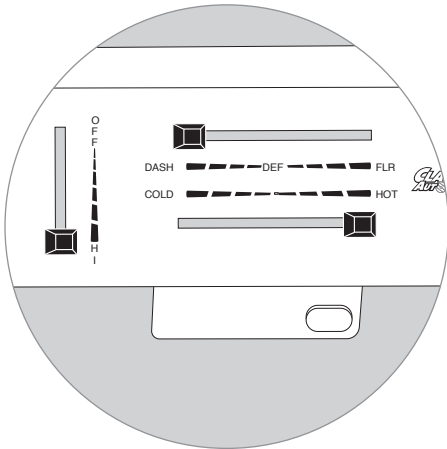


AFTER YOU MOVE THE KNOB YOU WILL SEE...

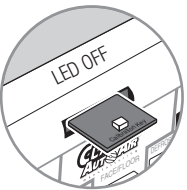

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

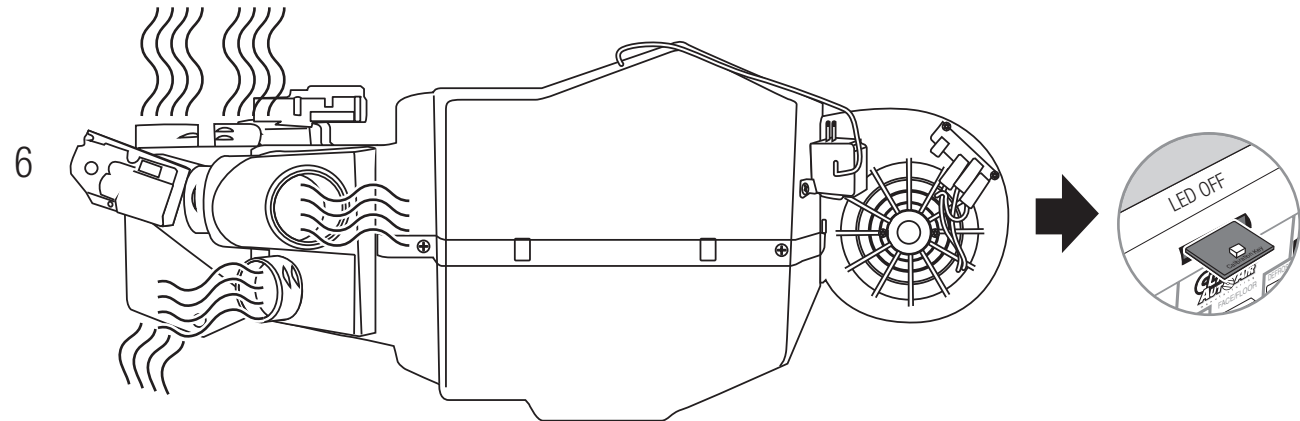


7

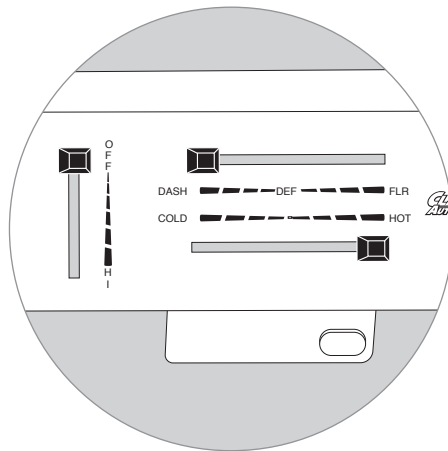

Move FAN knob to OFF

8

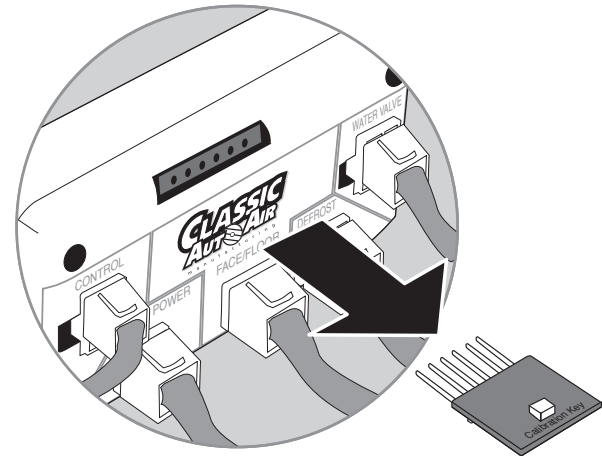

REMOVE CALIBRATION KEY FROM ECU AND
STORE IN A SAFE PLACE

