

Installation Manual


1970-1972 Chevelle/Malibu

Factory Air


DOCUMENT #1-2050FA BENCH CALIBRATION INSTRUCTIONS




** D.E.R. shown in illustrations

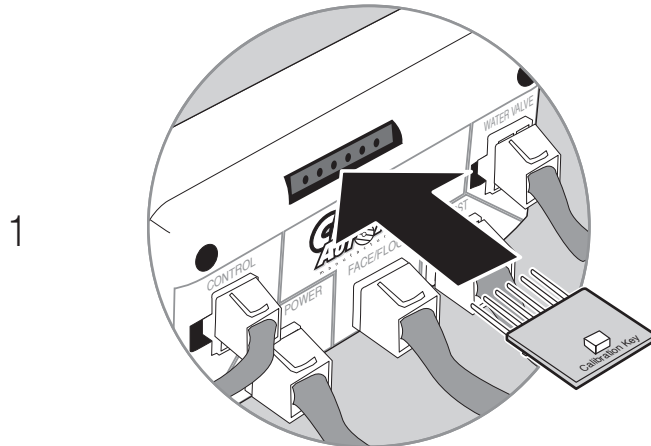


Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

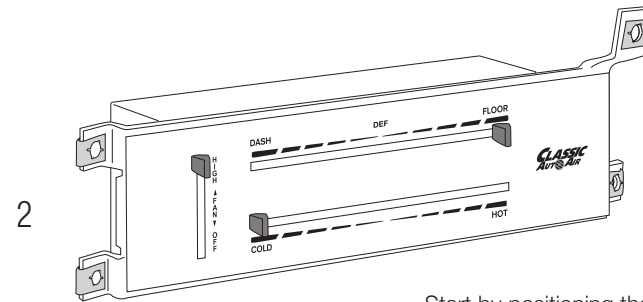

Start by positioning the Control knobs as shown:
Fan: Off
Mode: Floor
Temp: Cold

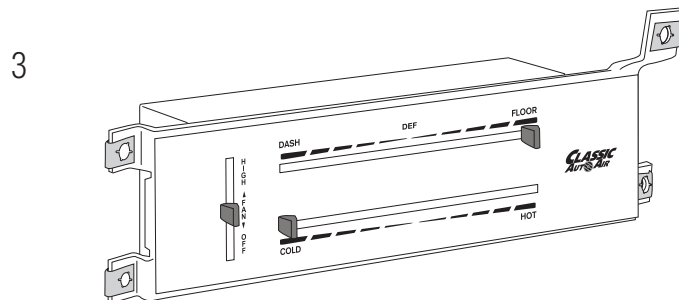


Move Fan Knob to Center...

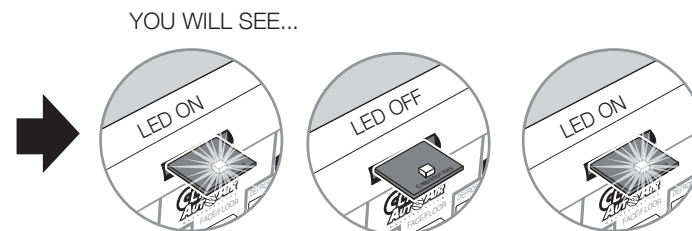


4

Move MODE knob to DASH
in one motion

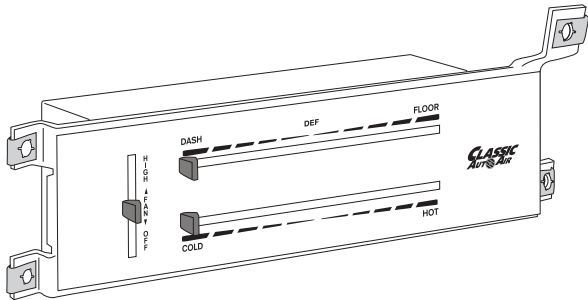


AFTER YOU MOVE THE KNOB YOU WILL SEE...

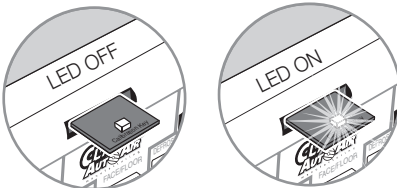


5

Move TEMP knob to HOT
in one motion

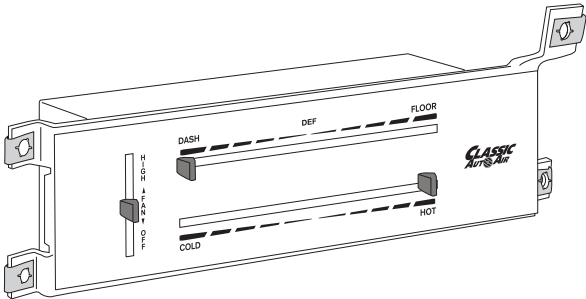


AFTER YOU MOVE THE KNOB YOU WILL SEE...

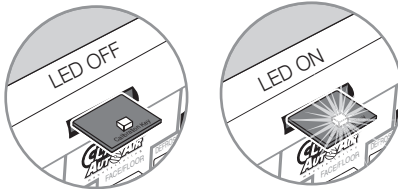


6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

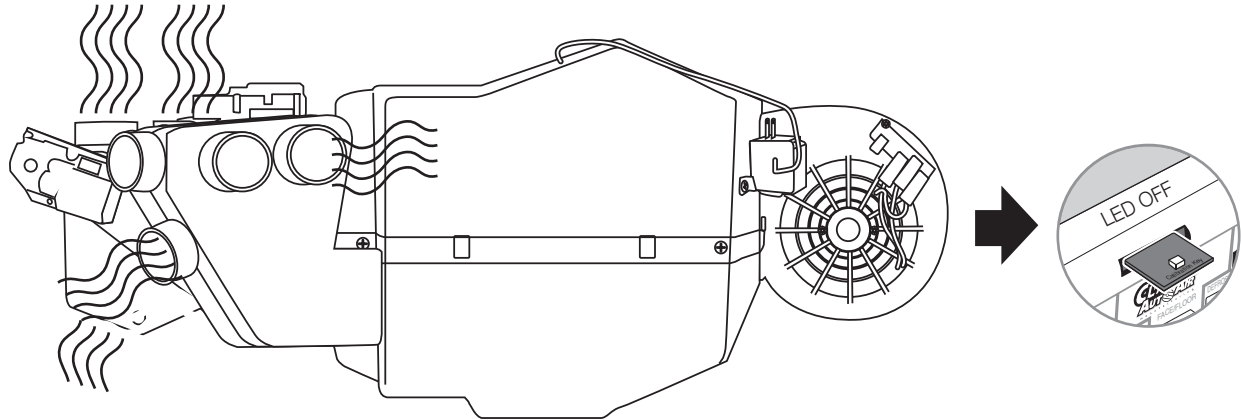


7

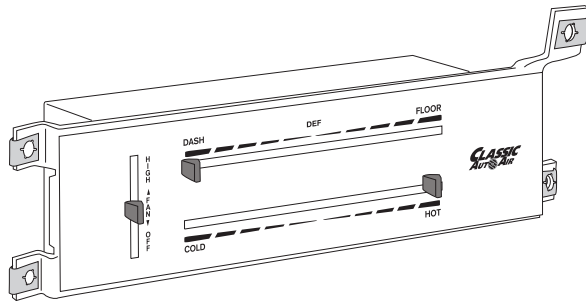

Move FAN knob to OFF

8

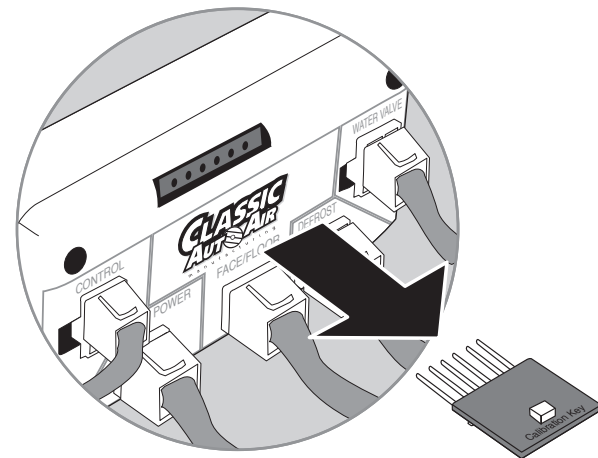

REMOVE CALIBRATION KEY FROM ECU AND
STORE IN A SAFE PLACE

