



Installation Manual


1967 GTX FACTORY AIR

DOCUMENT #1-2065FA BENCH CALIBRATION INSTRUCTIONS

©2018 ClassicAutoAir / 12.18



BENCH CALIBRATION

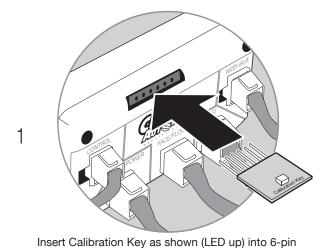

CLASSIC AUTO AIR HOT DASH


Start by positioning the D.E.R. knobs as shown:


Fan: Off Mode: Floor Temp: Cold

connection in ECU

3

Move Fan Knob to Center...






YOU WILL SEE...





4



Move MODE knob to DASH in one motion


AFTER YOU MOVE THE KNOB YOU WILL SEE...






5

Move TEMP knob to HOT in one motion




AFTER YOU MOVE THE KNOB YOU WILL SEE...







6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

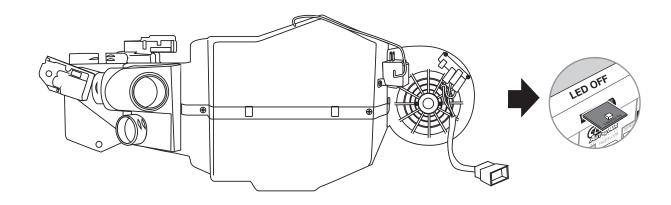

Move FAN knob to OFF



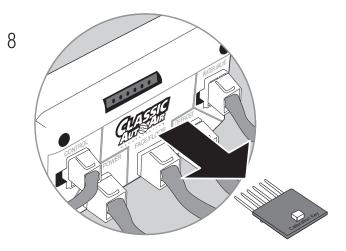

REMOVE CALIBRATION KEY FROM ECU AND STORE IN A SAFE PLACE