




Installation Manual

1968-1970 MOPAR B-BODY FACTORY AIR


DOCUMENT #1-2066FA BENCH CALIBRATION INSTRUCTIONS

©2018 ClassicAutoAir / 12.18



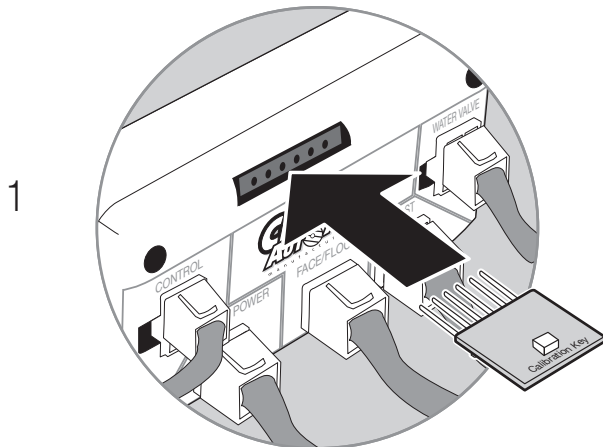


Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

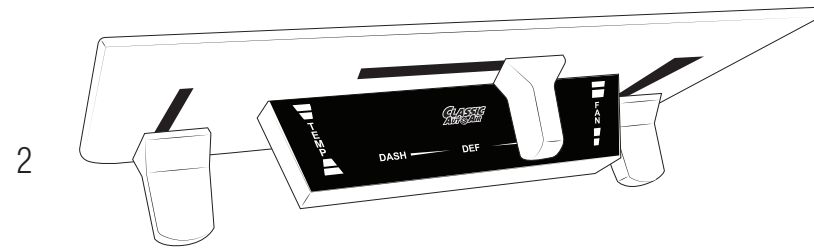


Start by positioning the D.E.R. knobs as shown:

Fan: Off
Mode: Floor
Temp: Cold

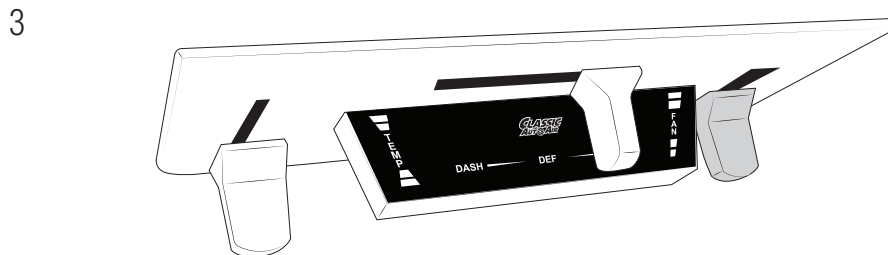


Move Fan Knob to Center...

YOU WILL SEE...

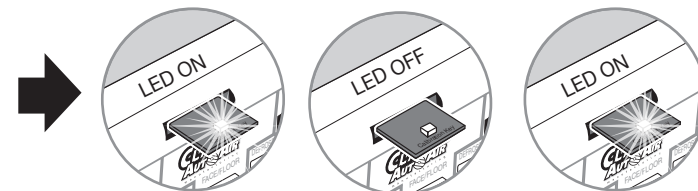


4

Move MODE knob to DASH
in one motion

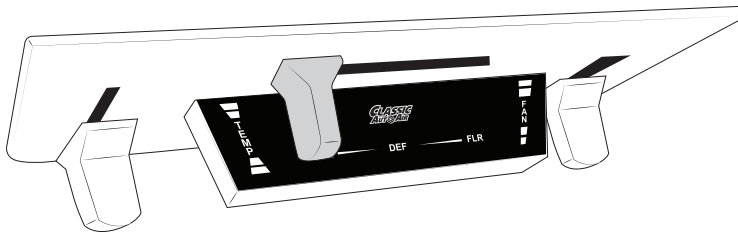


AFTER YOU MOVE THE KNOB YOU WILL SEE...

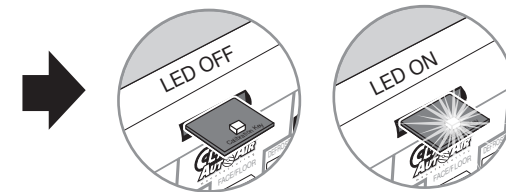


5

Move TEMP knob to HOT
in one motion

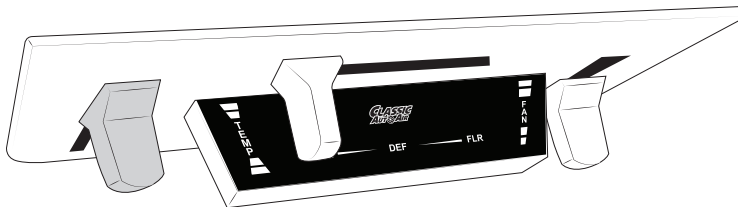


AFTER YOU MOVE THE KNOB YOU WILL SEE...

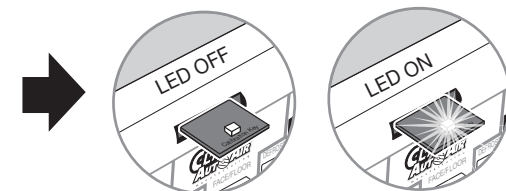


6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

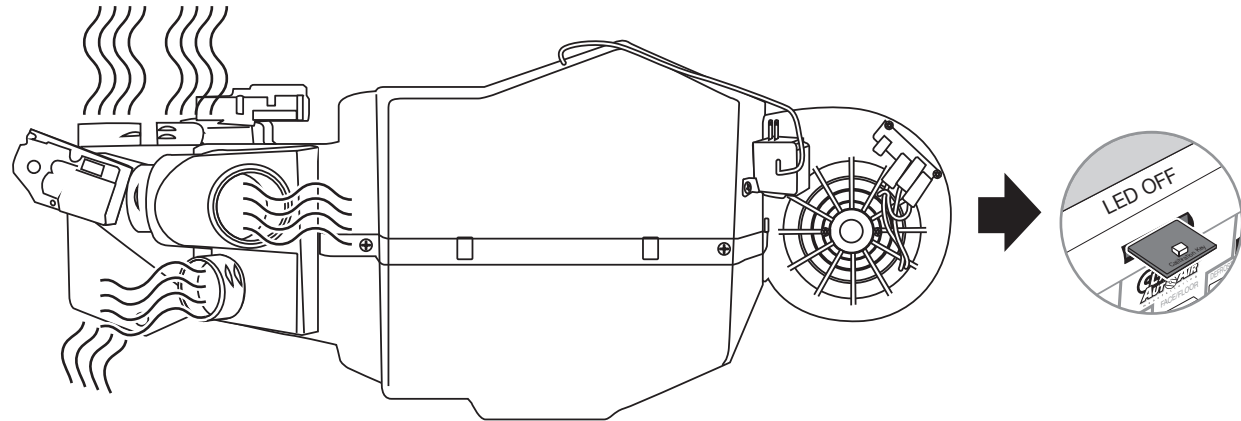


7

Move FAN knob to OFF

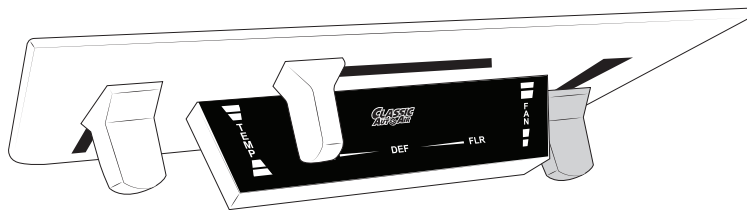

8

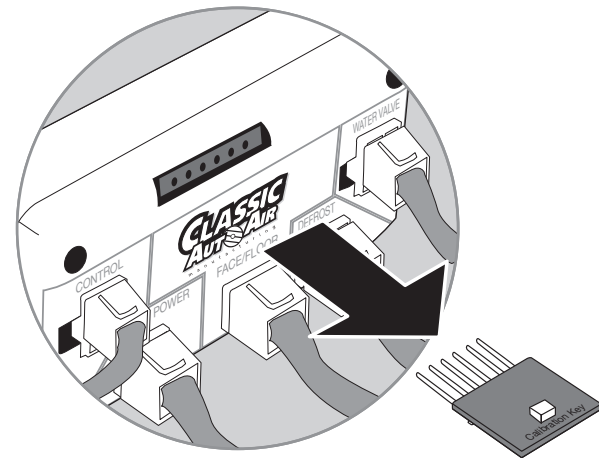

**REMOVE CALIBRATION KEY FROM ECU AND
STORE IN A SAFE PLACE**

