

# ***Installation Manual***

---

## ***1971-1973 Mustang***


DOCUMENT #1-2028FA BENCH CALIBRATION

©2018 ClassicAutoAir / 12.18






1

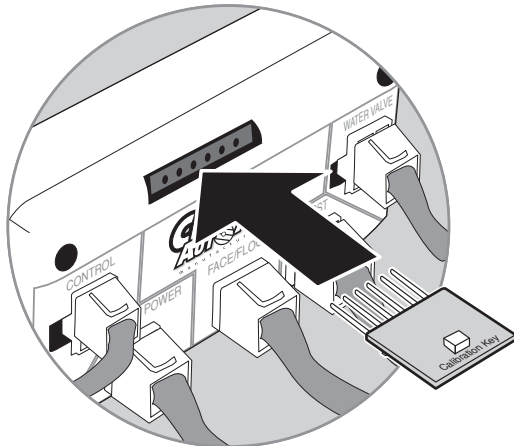


Insert Calibration Key as shown (LED side up) into 6-pin connection in ECU

2

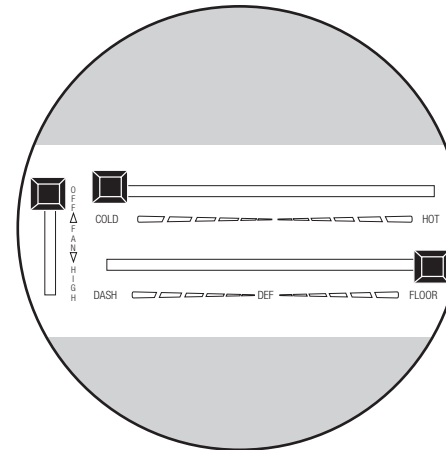



Start by positioning the knobs as shown:  
Fan: Off  
Mode: Floor  
Temp: Cold

3

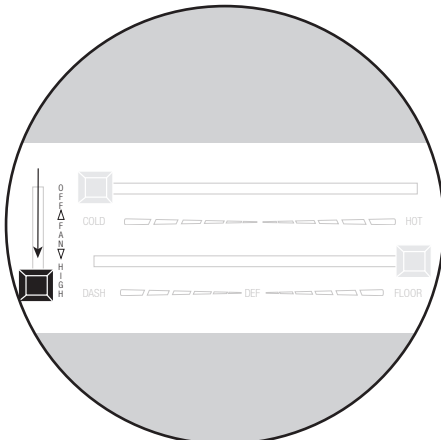


Move Fan Knob to High...

YOU WILL SEE...

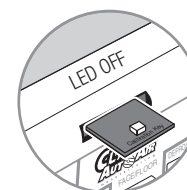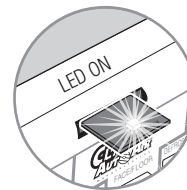


Move MODE knob to DASH  
in one motion

4

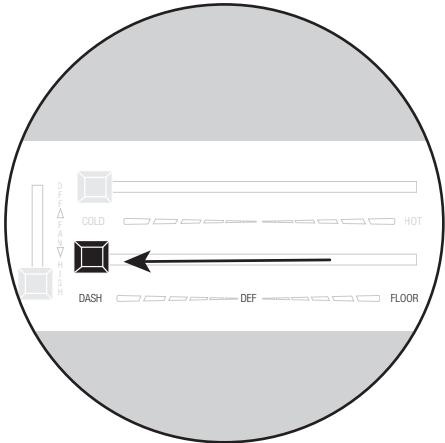


AFTER YOU MOVE THE KNOB YOU WILL SEE...

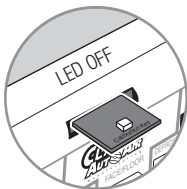


Move TEMP knob to HOT  
in one motion

5


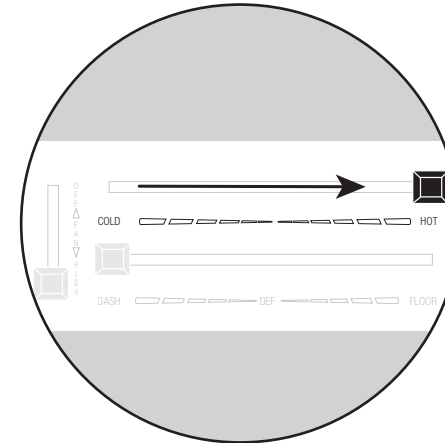


AFTER YOU MOVE THE KNOB YOU WILL SEE...

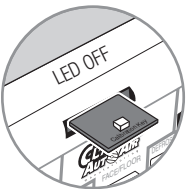

6


You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

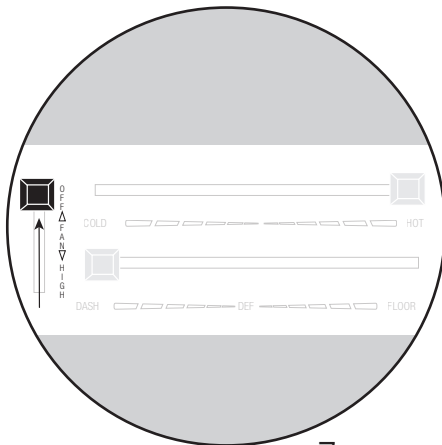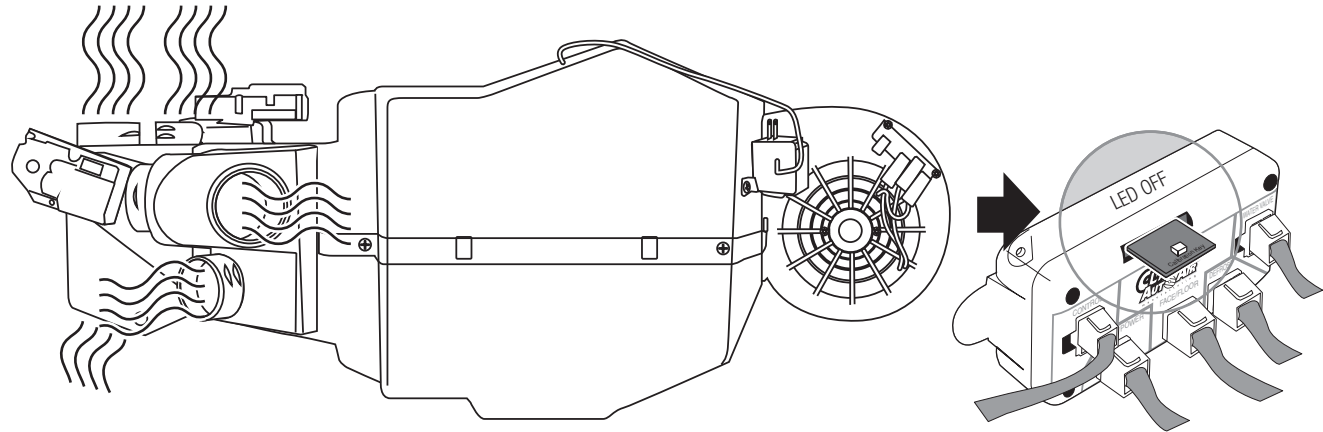

7

Move FAN knob to OFF

8

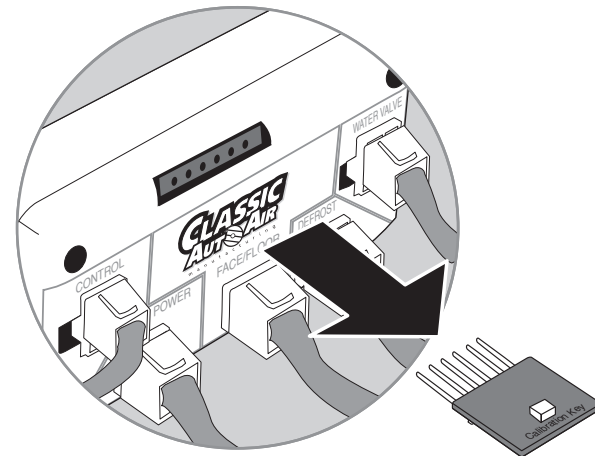

REMOVE CALIBRATION KEY FROM ECU AND  
STORE IN A SAFE PLACE

