

# ***Installation Manual***


---

## ***1970-1972 Chevelle/Malibu***


DOCUMENT #1-2050 BENCH CALIBRATION INSTRUCTIONS





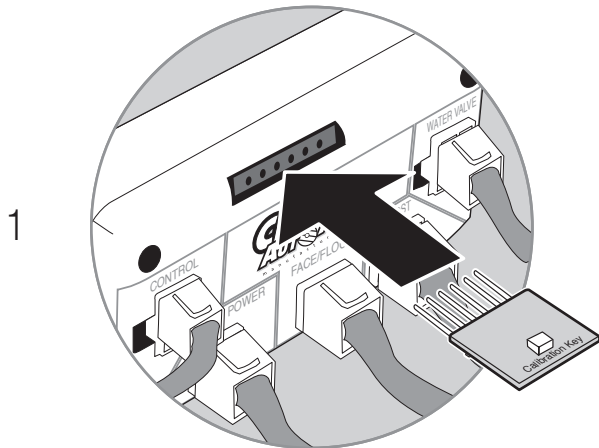


Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

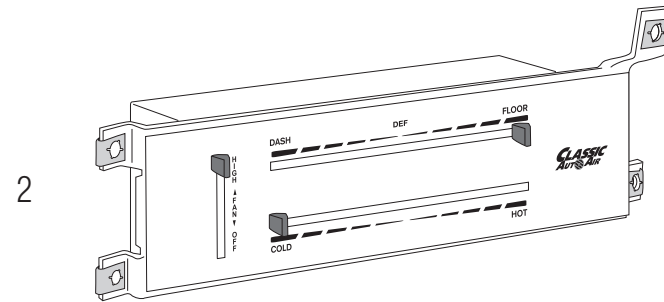


Start by positioning the Control knobs as shown:

Fan: Off  
Mode: Floor  
Temp: Cold

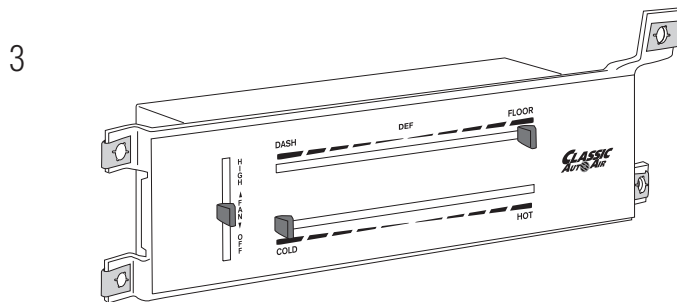


Move Fan Knob to Center...

YOU WILL SEE...

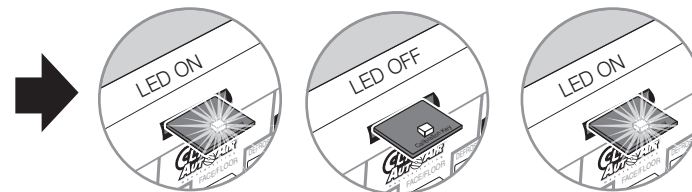


4

Move MODE knob to DASH  
in one motion

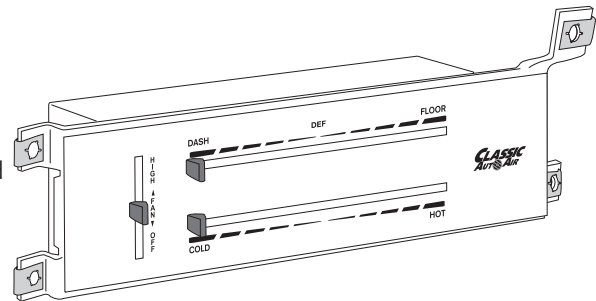


AFTER YOU MOVE THE KNOB YOU WILL SEE...

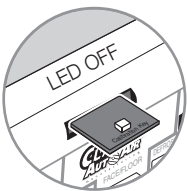


5

Move TEMP knob to HOT  
in one motion

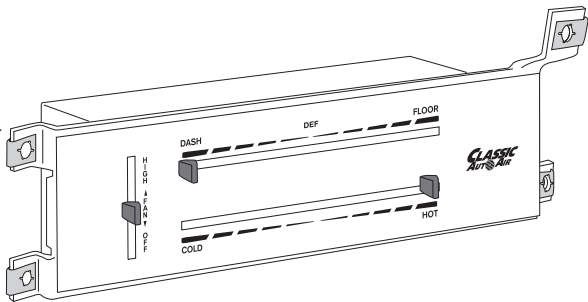


AFTER YOU MOVE THE KNOB YOU WILL SEE...

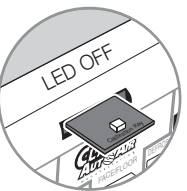


6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

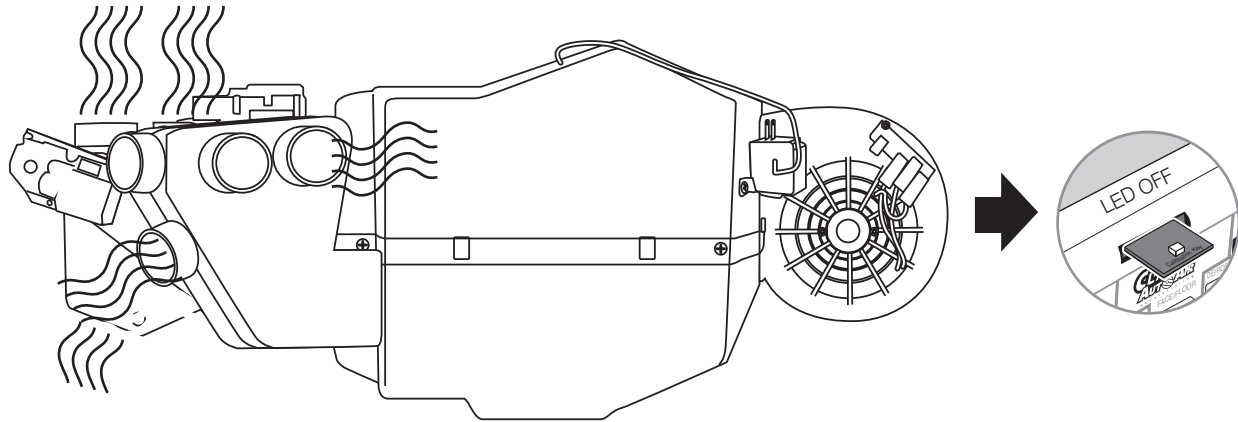


7

Move FAN knob to OFF

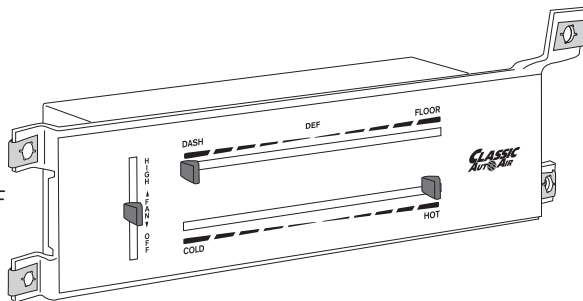

8

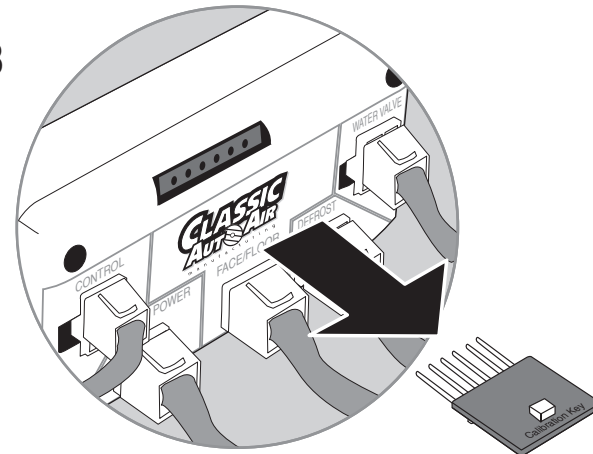

REMOVE CALIBRATION KEY FROM ECU AND  
STORE IN A SAFE PLACE

