



Installation Manual

1970-1972 Chevelle/Malibu


Factory Air

DOCUMENT #1-2050FA BENCH CALIBRATION INSTRUCTIONS


©2018 ClassicAutoAir / 12.18




** D.E.R. shown in illustrations

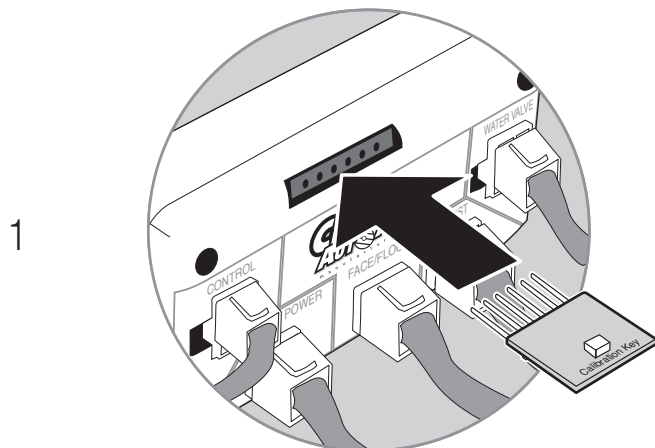

Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

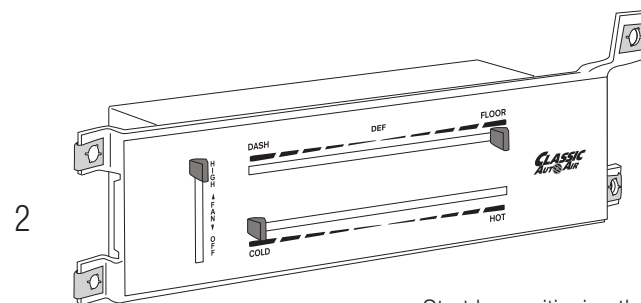


Start by positioning the Control knobs as shown:
Fan: Off
Mode: Floor
Temp: Cold

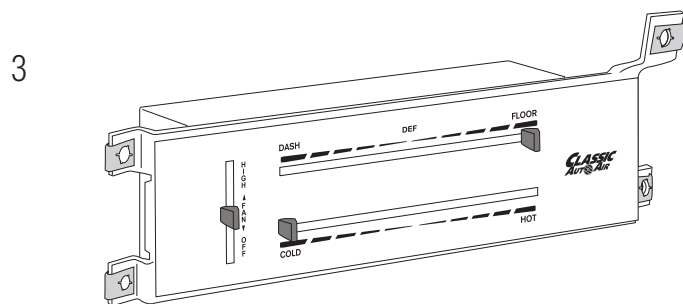


Move Fan Knob to Center...

YOU WILL SEE...

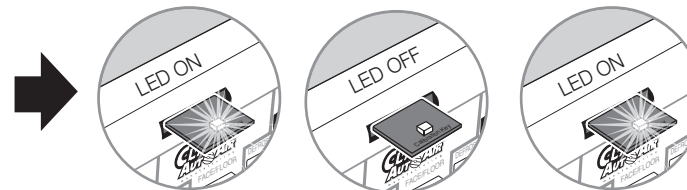


4

Move MODE knob to DASH
in one motion

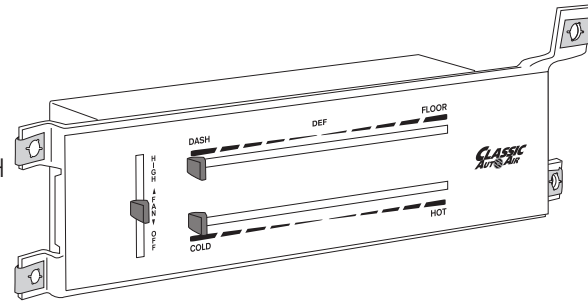


AFTER YOU MOVE THE KNOB YOU WILL SEE...

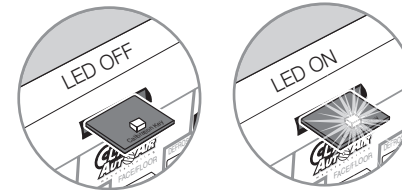


5

Move TEMP knob to HOT
in one motion

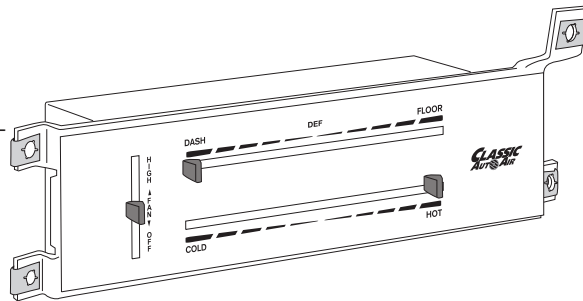


AFTER YOU MOVE THE KNOB YOU WILL SEE...

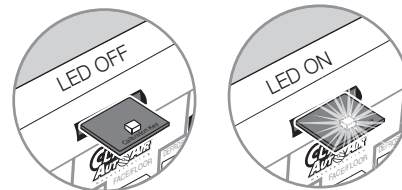


6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

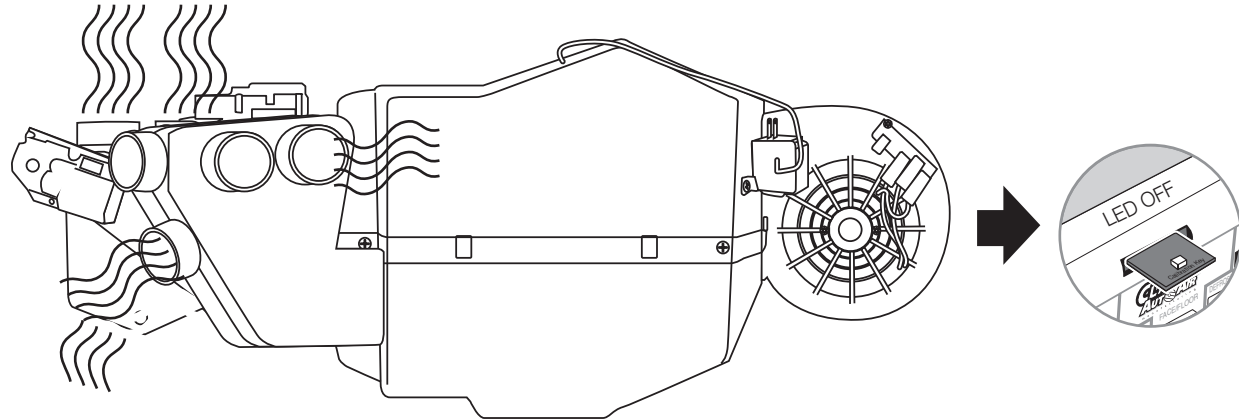


7

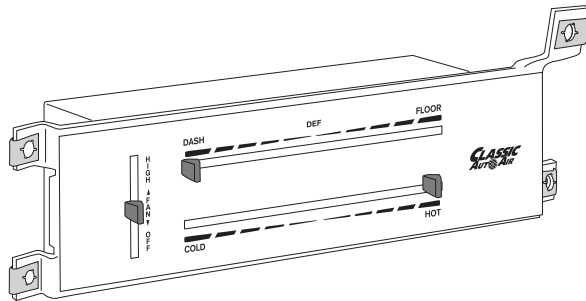

Move FAN knob to OFF

8

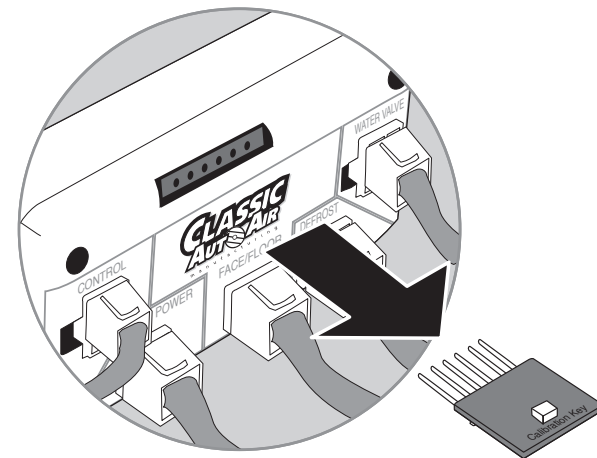

REMOVE CALIBRATION KEY FROM ECU AND STORE IN A SAFE PLACE

