




Installation Manual

***1969 Firebird** Factory Air*


DOCUMENT #1-2094FA BENCH CALIBRATION INSTRUCTIONS

©2018 ClassicAutoAir / 12.18



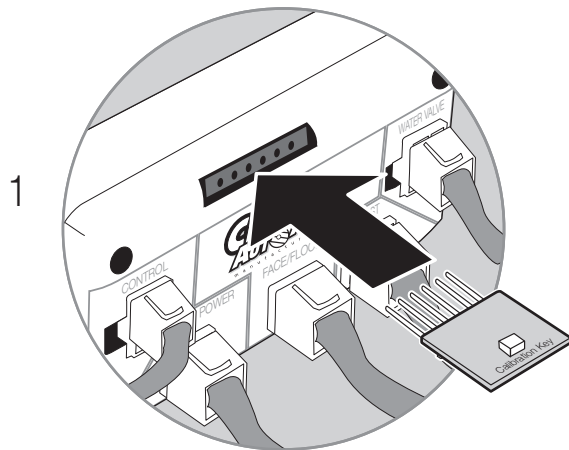


Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

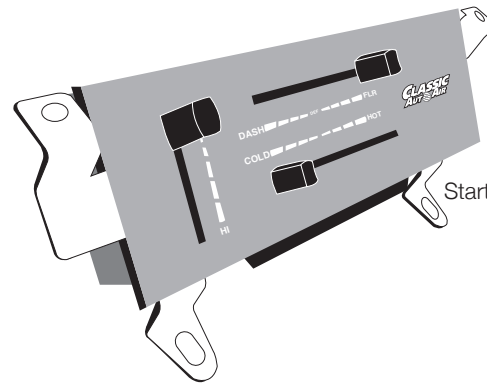


Start by positioning the D.E.R. knobs as shown:
Fan: Off
Mode: Floor
Temp: Cold

3

Move Fan Knob to Center...

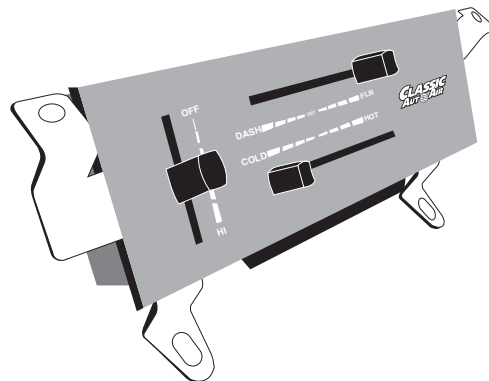


YOU WILL SEE...

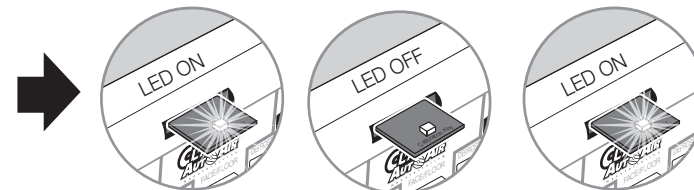


4

Move MODE knob to DASH in one motion

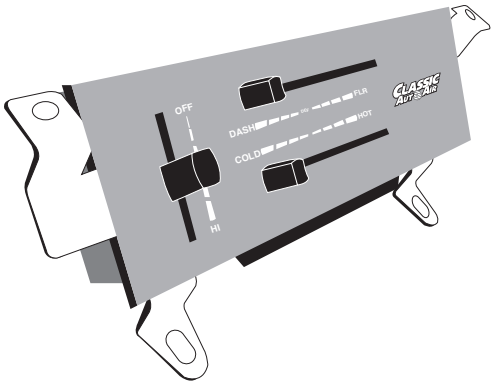


AFTER YOU MOVE THE KNOB YOU WILL SEE...

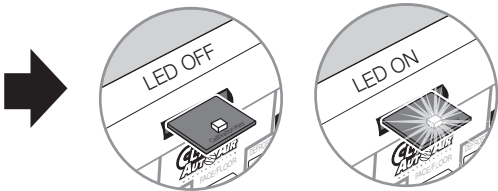


5

Move TEMP knob to HOT in one motion

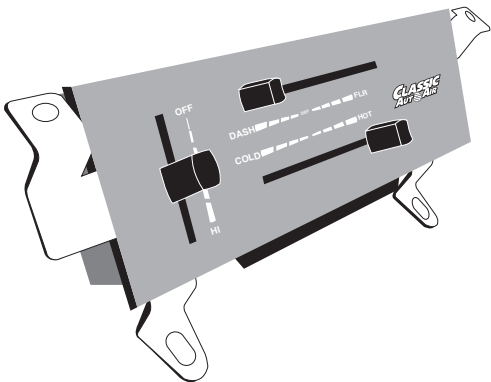


AFTER YOU MOVE THE KNOB YOU WILL SEE...

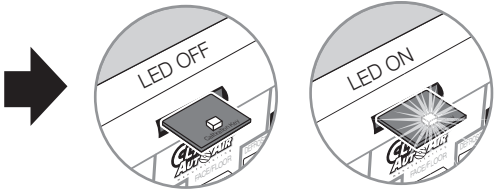



6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

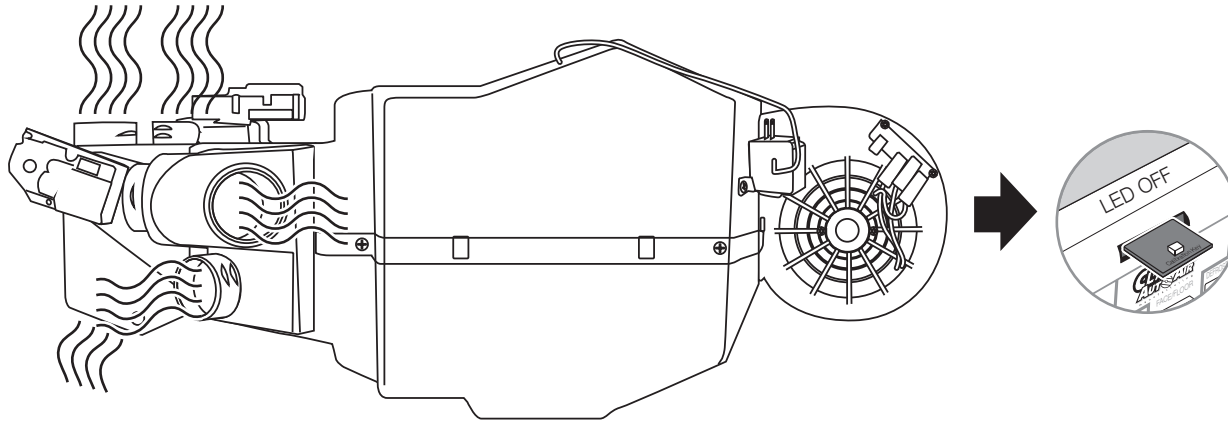

7

Move FAN knob to OFF

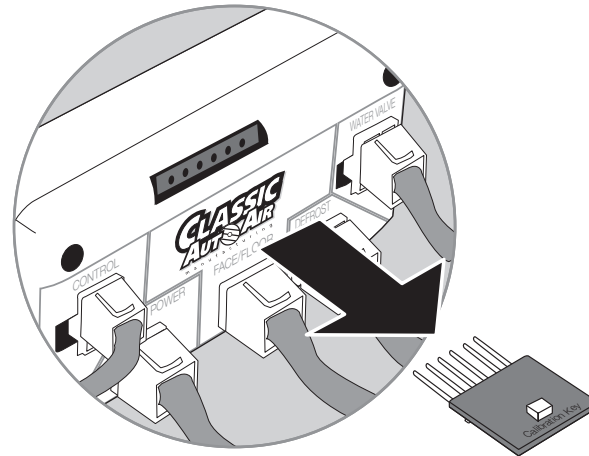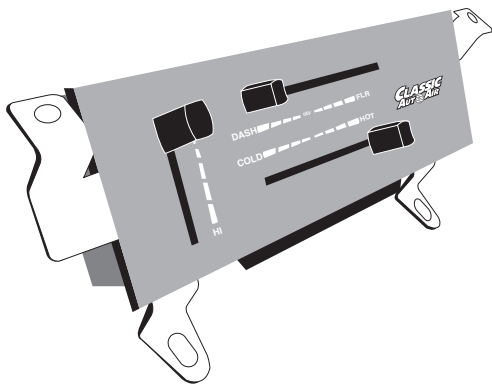

REMOVE CALIBRATION KEY FROM ECU AND
STORE IN A SAFE PLACE

