




# ALTERNATOR MOUNT 200L

Small Block Chevy - Driver's Side Short Water Pump

Place Adjustor Arm behind opening in mount.

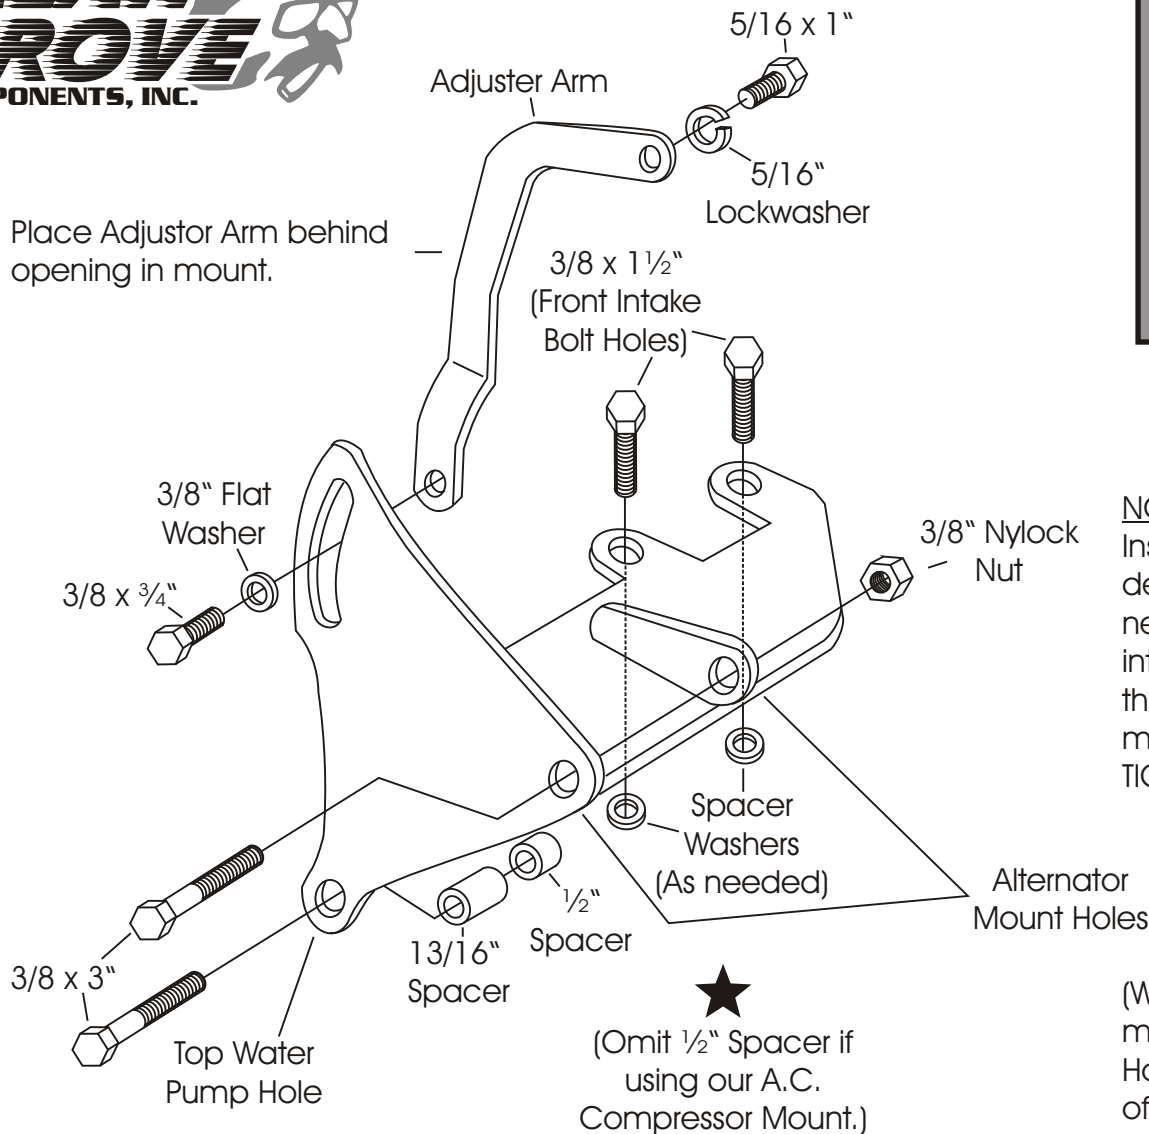

**NOTE:**

Install bolt into the water pump first. Then determine the number of spacer washers needed between the bracket and the intake manifold. This will vary with the thickness of the various brands of manifolds. START ALL BOLTS BEFORE TIGHTENING.

(We use a belt length of 51 to 52" with this mount on installations in our shop. However; this can vary with the diameter of your pulleys.)

**As with any part of this nature, make sure it fits your application before painting or plating. Parts that have been painted, plated, or modified may not be returned.**

ALTERNATOR  
MOUNT  
200L

Small Block Chevy - Driver's Side  
Short Water Pump

**ALAN GROVE COMPONENTS, INC.**  
**27070 METCALF ROAD**  
**LOUISBURG, KS 66053**