


DOCUMENT #1-2078 BENCH CALIBRATION INSTRUCTIONS

©2020 Classic Auto Air / 01.20



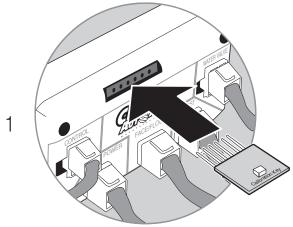

OFF C H

Insert Calibration Key as shown (LED up) into 6-pin connection in ECU

Start by positioning the D.E.R. knobs as shown:
Fan: Off
Mode: Floor

Temp: Cold

3 Move Fan Knob to Center...









YOU WILL SEE...






Move MODE knob to DASH in one motion







AFTER YOU MOVE THE KNOB YOU WILL SEE...





Move TEMP knob to HOT 5 in one motion








AFTER YOU MOVE THE KNOB YOU WILL SEE...








6

You will be able to hear the internal door(s) move back and forth and feel air coming out of the outlets

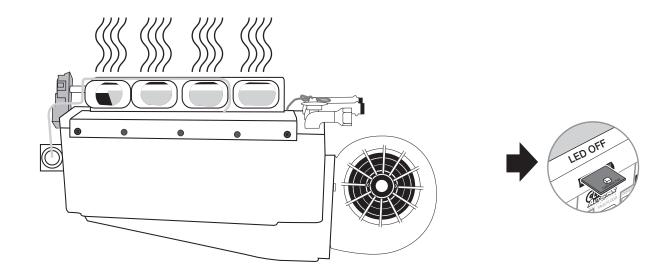


7 Move FAN knob to OFF







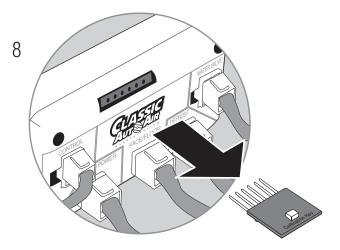

REMOVE CALIBRATION KEY FROM ECU AND STORE IN A SAFE PLACE